



**Instructions for Installation of Can-Am Maverick Soft Door Kit**  
52-10032-Z CA-X3-SDK01

**CAUTION: Do not smoke inside the cab or expose the enclosure to direct flames. Product is FLAMMABLE.**

Be sure to read these instructions thoroughly before opening and installing the enclosure. The installation is best done when the temperature is 70 degrees F. or warmer. The temperature affects the adhesive Velcro, if conditions prevent installing in warmer weather it helps to store the adhesive Velcro at room temperature prior to installation.

1. Carefully open the carton and remove the rolled up Cab Enclosure on a large flat surface that is clean and free of dirt or other material that may soil or scratch the windows of the Cab.
2. Check over the parts included in the carton with the parts list shown below:

**Doors:**

Velcro Hook strips:

18 each 3" long


2 each 8" long


Snap studs 10 each (2 extra)

Door Panels 2 each


**If any parts are damaged or missing, please contact customer service at (606) 845-7439.**

3. Begin installation by hanging the Door Panels from the top by using the 3" adhesive Velcro strips as shown in the photos below:

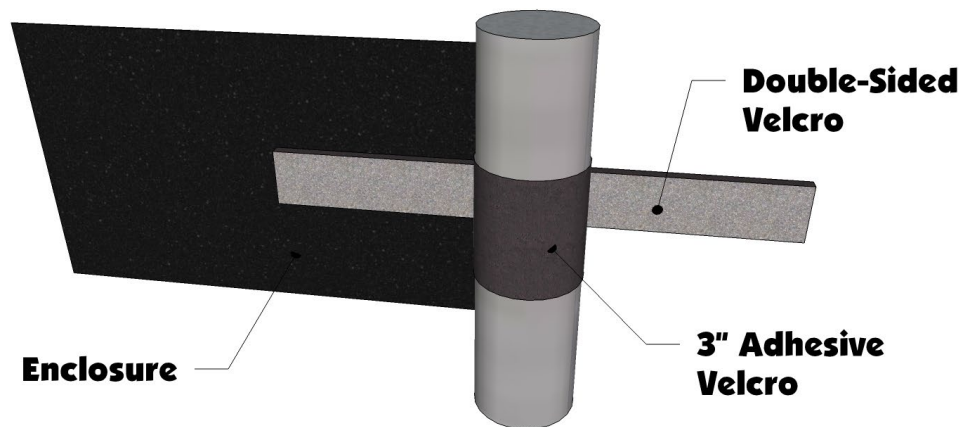

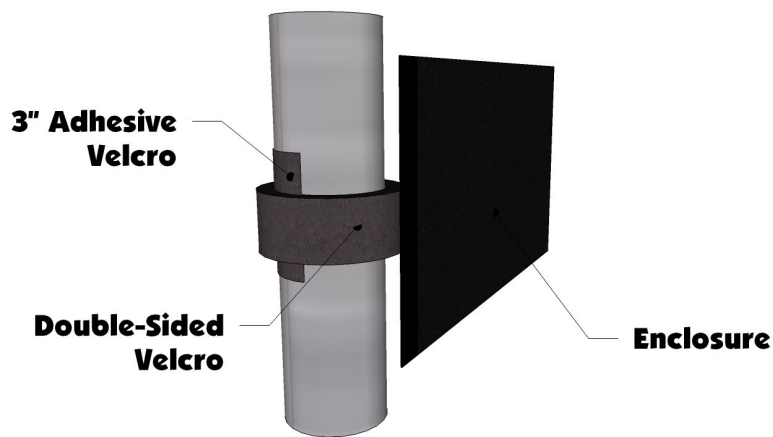

4. Begin installation of the Door Panels by hanging them from the Double-Sided Strips along the top of the doors. Hold the door up and mark where the each strip is and wrap a 3" adhesive strip around the roll cage. Now hang the door up and it will be in place to install the rest of the Velcro for the door. See the photo below:

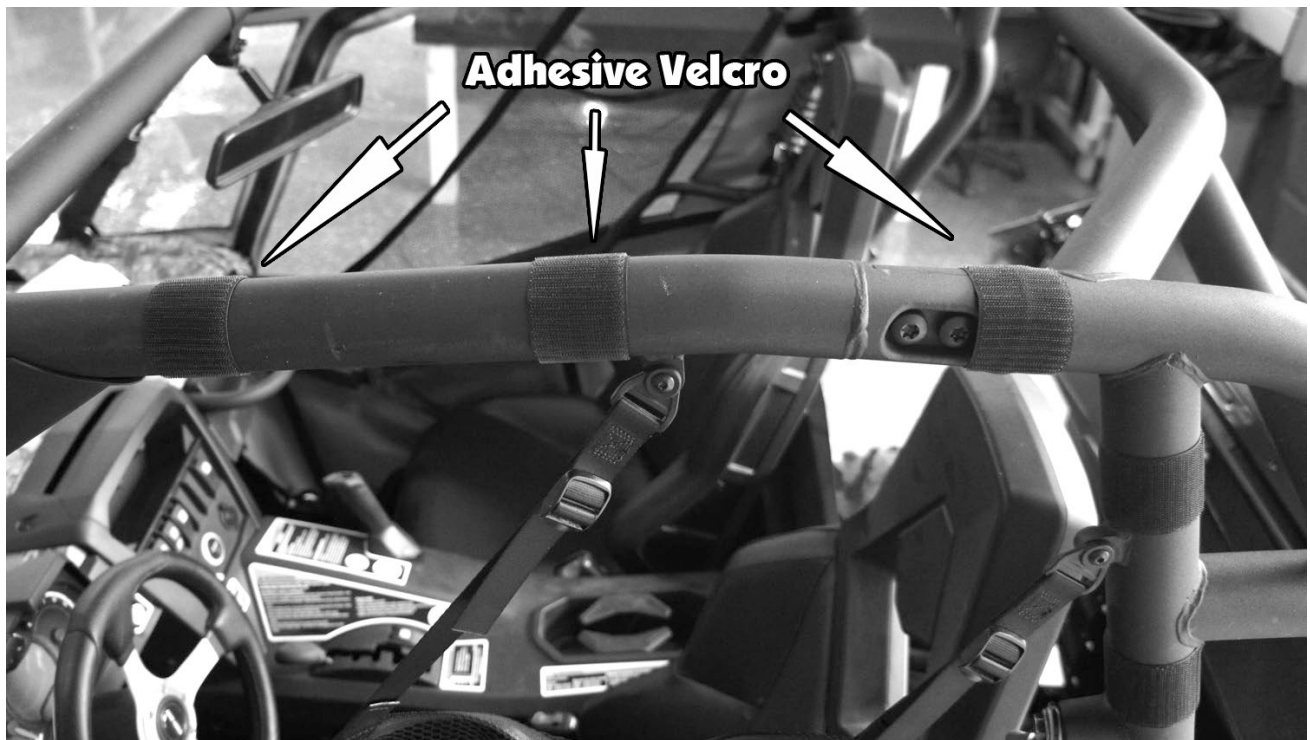

5. Now move around the door and attach the remaining Velcro strips in the same manner. Down the front of the door place the edge of the door against the side of the windshield and run the Velcro strips under it with the 3" adhesive Velcro on the inside of the roll cage.
6. As you move down the front edge of the door you will see a notch cutout of the door. At this point you will take the door to the inside edge of the roll cage, It is designed to either attach to the main roll cage all the way down or just attach the first double-sided strip to the main frame and then the next two will attach to the front intrusion bar if you have one installed



7. The rear of the door has two double-sided Velcro strips that attach to the main bar towards the rear and the short downward bar as shown in the photo below



8. Next you will need to install the 4 snap studs on each door, two in the front and two in the rear. **TIP: You may find it easier to snap the screw stud into the socket on the door first and then pull the Door Panel to the position it should be in and push the screw into the plastic to mark its position. Then remove the screw stud from the socket and drive it into the plastic.** See the following photos:



9. Lastly take the 3 straps along the bottom of the door and attach them to the main door frame as shown in the photos below.





### **Cleaning and Storage Recommendations:**

1. Before removing the Cab for storage, make sure it is very clean in order to prevent scratching of the window panels. Clean with a soft rag or sponge using a mild liquid detergent soap and warm water solution. Never rub the windows with a dry cloth or rag! Let the Cab dry thoroughly before attempting to roll for storage.
2. It is important that the Cab be rolled up for storage rather than folding. Folding will cause damage to the windows!!! Carefully roll up the Cab similar to the way it was when it was packed at the factory. On a large, clean and flat surface, fold the doors over the rear panel first, then, interleave the top and windshield on top of the doors. Begin rolling the Cab into a roll approximately 8 inches in diameter. Put the rolled Cab back into the carton for storage at a normal room temperature. It is best not to expose the Cab to either extreme hot or cold temperatures when storing.

## **Warranty**

To The Owner of this Product:

30 Day Warranty which includes and is not limited to replacing the enclosure, tops and/or windshield due to defect of the product. Please refer to the return policy in this case for more information.

1 Year Warranty includes any defect in material or workmanship within this time frame we will gladly correct the problem or replace the enclosure, tops &/or windshield. Upon submitting for the correction or replacement we will need to receive pictures of the defect in material or workmanship along with the receipt from the date of purchase.



**WARNING:** This product contains a chemical known to the State of California to cause cancer. For more information, go to [www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov).