




GENESIS 250/300 REAR SEAT WILL FIT E-Z-GO® TXT® AND FREEDOM TXT® INSTALLATION INSTRUCTIONS

INCLUDED:

- Hardware Packs 1-7
- Grab Bar
- Lean Back Brackets
- Footrest
- Bagwell Brackets
- Main Brackets
- Main Frame
- Arm Rests

TOOLS NEEDED:

- Drill
- 17mm Wrench
- 17mm Socket
- #3 Phillips Bit
- 14 mm Socket
- 10mm Socket
- 3/8" Drill Bit
- 13mm wrench

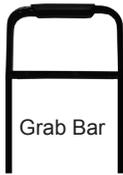

Grab Bar

Lean Back Brackets



Main Seat Brackets



Bagwell Brackets



Armrests



Footrest





Main Frame

Madjax recommends professional installation. If you choose to not have this product installed by a professional, we highly recommend that you exercise caution, care, and patience when installing this product as it involves drilling holes into your cart's body.

1

Remove strut and basket assembly. Remove hardware from struts and detach canopy. Use a brace to support the canopy. Retain hardware.

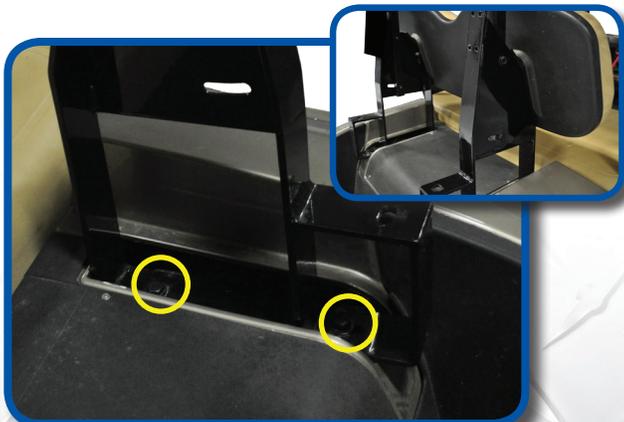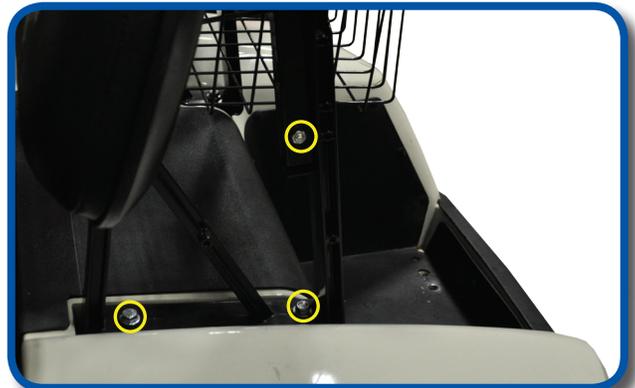

Attach main seat bracket using hardware from pack 1. Side plate of bracket should be facing the outside of cart. Tighten hardware.

2

3

Attach factory roof struts using remaining hardware from pack 1. Re-attach factory roof using retained hardware.




Attach factory lean back cushions using hardware retained from step 1.

4

5

Attach main polyboard frame to main bracket using hardware from pack 2 and tighten.

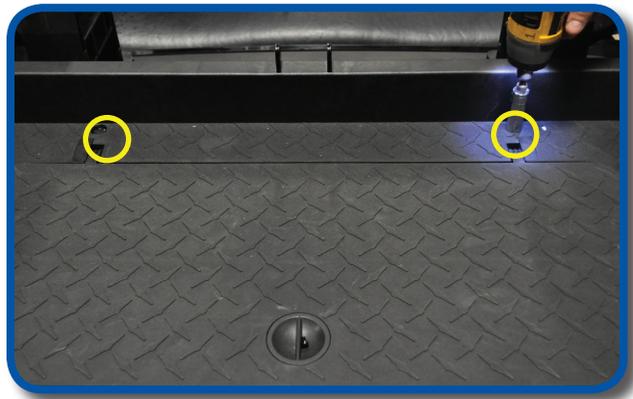


Attach bagwell bracket to poly seat frame as shown using 10mm hardware from pack 2.

6


Using a 3/8"mm drill bit, drill out previously marked holes through outer bumper into bagwell.




Attach bagwell bracket to rear of cart as shown using hardware from pack 2.

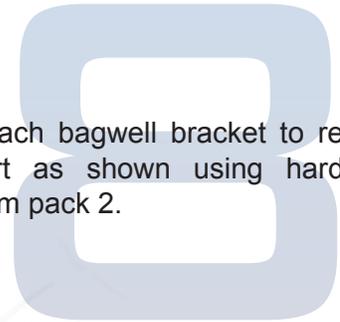

Attach armrest to main polyboard frame using hardware from pack 3. Repeat process on the other side. Tighten hardware.

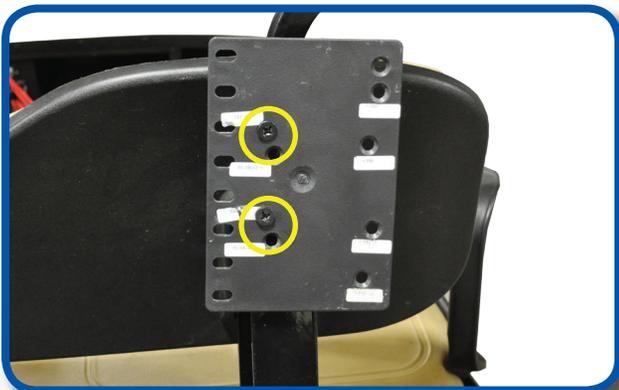


Using the appropriate labeled hole for your cart attach lean back bracket to main seat bracket using hardware from pack 4.

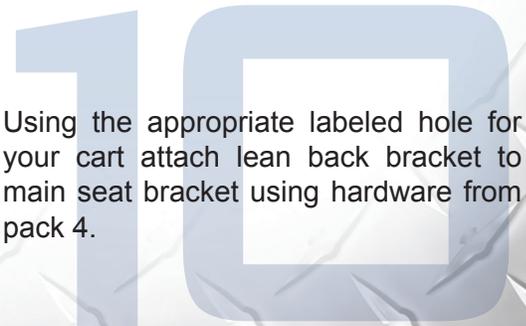

11
Choose desired height and attach cushion to lean back bracket using hardware from pack 5.




12
Attach footrest to bagwell bracket using 10mm hardware from pack 6. Repeat process on other side and tighten.

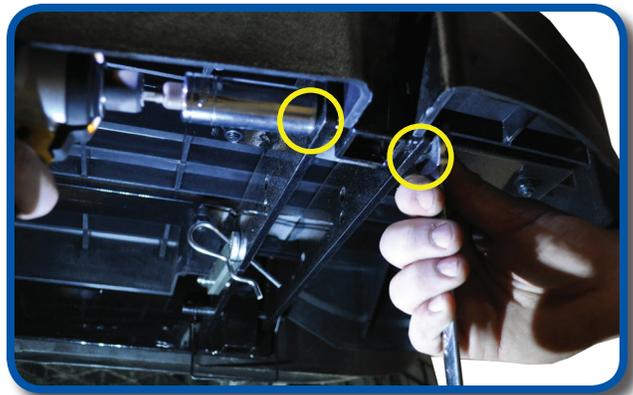

13
Attach grab bar to foot rest as shown using hardware from pack 6.



14
Secure footrest as shown using quick release clips from hardware pack 6.

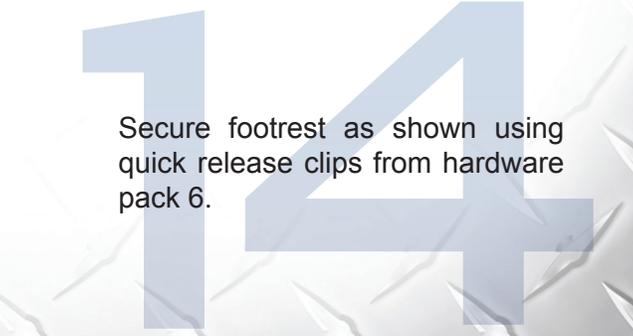

15
Attach seat bottom cushion as shown using hardware from pack 7.



16
Footplate can be folded up by removing the four quick release clips and folding forward. To lock footplate in up right position use brackets as shown.



INSTALLATION COMPLETE

VISIT WWW.MYMADJAX.COM FOR MORE INSTALLATION VIDEOS

E-Z-GO®, E-Z-Go® TXT®, and E-Z-Go® RXV® are registered trademarks of Textron Innovations, Inc. Club Car®, Club Car® Precedent®, and Club Car® DS® are registered trademarks of Ingersoll Rand, Inc. Yamaha®, Yamaha® Drive®, G-14®, G-16®, G-19®, and G-22® are registered trademarks of Yamaha Golf-Car Company. Any reference to Club Car®, E-Z-Go®, or Yamaha® or their associated trademarks, word marks, and products are only for purposes of identifying golf carts with which this Madjax product is compatible. Madjax products are aftermarket parts and are not original equipment parts. Madjax is not connected to, affiliated with, sponsored by, or endorsed by either Textron Innovations, Inc., Ingersoll Rand, Inc., Yamaha Golf Cart Company, or any of their parent or subsidiary companies.

