



**Part Number - 51-20983**

**Installation and Care for Honda Pioneer 1000 5 Front and Rear Doors and Middle Rear Window Combo**

Caution: Do not smoke inside the cab or expose the enclosure to direct flames. Cab is Flammable.

Be sure to read these instructions thoroughly before opening and installing the enclosure. The installation is best done when the temperature is 70 degrees F. or warmer. The temperature affects the adhesive Velcro, if conditions prevent installing in warmer weather it helps to store the adhesive Velcro at room temperature prior to installation.

1. Carefully open the carton and remove the enclosure on a large flat surface that is clean and free of dirt.
2. Check over the parts included in the carton with the parts list shown below:

Location	Velcro Hook Strips	
	Qty	Length
Front Door	16	3 inches
	2	5 inches
	2	6 inches
	2	8 inches
Middle Rear Window		
	8	3 inches
	1	47 inches
Rear Door		
	12	3 inches
	2	2 inches
	2	9 inches
	<b>Snap Studs</b>	
	20 (2 extra)	

The cab for your Honda Pioneer 1000 5 is made up of 5 different components that work together to enclose your vehicle. Install the cab in the following order.

- 1) Soft Front Doors
- 2) Middle Rear Window
- 3) Soft Rear Doors


## **Soft Front Doors:**

1. Begin by placing the 5", 6" and 8" adhesive Velcro strips in their place. The following pictures show where they go.





2. Next hold the door up to the frame and attach these spots then continue attaching it using the double-sided Velcro strips sewn perpendicular to the edge of the door. At each of the double-sided strips take one of the 3" adhesive Velcro strips and adhere it to the inside of the frame. Then wrap the double-sided strip around it so that the adhesive strip holds it firmly in place. The following diagrams show how it should look.

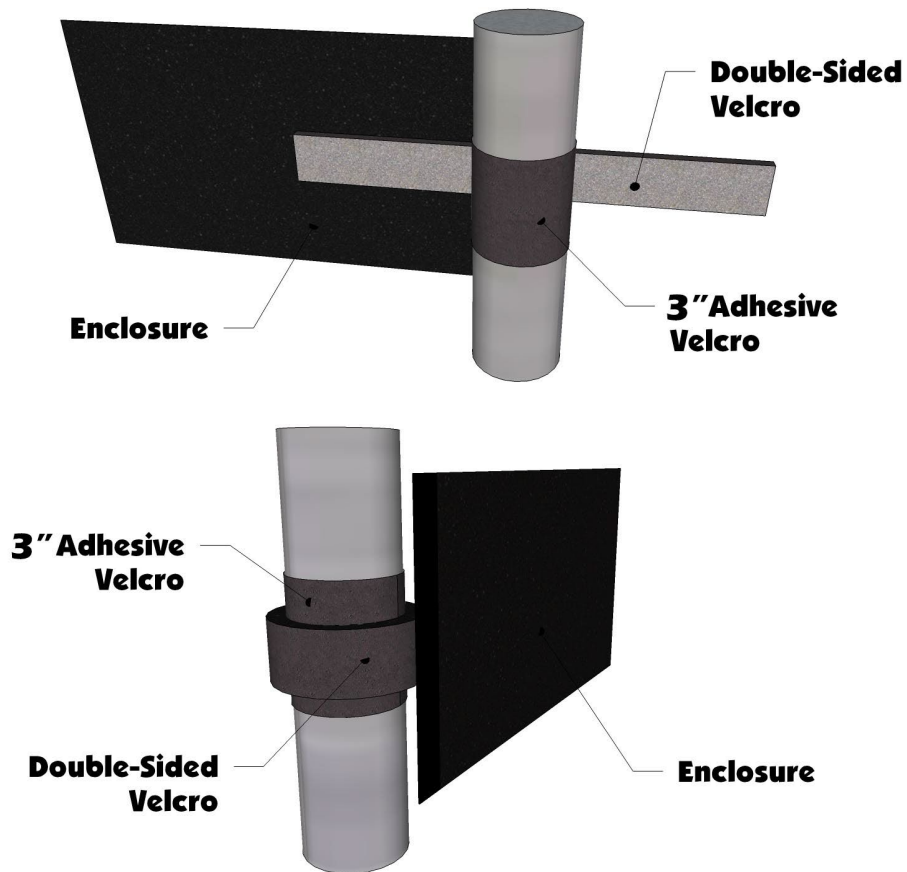

3. Once all the Velcro is attached securely take the snap studs and screw them into the plastic doors.  
**NOTE: It helps to put the snap studs into the sockets in the canvas first. Then one at a time push the screw into the plastic hard enough so that a mark is left behind. Pull the snap stud back out of the door and screw it into the plastic where the mark was made. snap the door in place and move on to the next one. See photo below.**



4. To use door simply unzip it and pull down on it to release the magnets then reach in and open the plastic door. Once in lift door up so the magnets attach to the bar and zip closed.

## **MIDDLE REAR WINDOW:**

5. Begin by placing the 47" adhesive Velcro strips across the top of the roll cage. Make sure to place it on top of the bar. Photo below shows how it should look.



6. Next attach the double-sided Velcro strips down the side bars. Start at the top and work your way down the tube. See photo below.



## **Soft Rear Doors:**

1. Begin by placing the 2" adhesive Velcro strip in the top front corner on the flat surface shown in the photo below.



2. Then take the Rear Door and zip it to the Middle Rear Window. This ensures the door is properly placed. Then attach the top front corner to the Velcro. See photo below.



3. Next use the 9" adhesive Velcro strip for the tab on the top rear section of the door.



4. Then attach the 3" adhesive strips for the double-sided strips sewn around the edge the same way you did for the front doors.

- Once all the Velcro is attached securely take the snap studs and screw them into the plastic doors.  
**NOTE: It helps to put the snap studs into the sockets in the canvas first. Then one at a time push the screw into the plastic hard enough so that a mark is left behind. Pull the snap stud back out of the door and screw it into the plastic where the mark was made. snap the door in place and move on to the next one. See photo below.**



#### **Cleaning and Storage Recommendations:**

- Before removing the Cab for storage, make sure it is very clean to prevent scratching of the window panels. Clean with a soft rag or sponge using a mild liquid detergent soap and warm water solution. Never rub the windows with a dry cloth or rag! Let the Cab dry thoroughly before attempting to roll for storage.
- It is important that the Cab be rolled up for storage rather than folding. Folding will cause damage to the windows!!! Carefully roll up the Cab like the way it was when it was packed at the factory. On a large, clean, and flat surface, fold the doors over the rear panel first, then, interleave the top and windshield on top of the doors. Begin rolling the Cab into a roll approximately 8 inches in diameter. Put the rolled Cab back into the carton for storage at a normal room temperature. It is best not to expose the Cab to either extreme hot or cold temperatures when storing.

If you have any questions, comments, need assistance, or are missing parts, please contact us by one of the methods below.

 [service@seizmik.com](mailto:service@seizmik.com)

 1-866-838-3366  
between 9:00 AM and 5:00 PM EST.



[www.seizmik.com/customer-support](http://www.seizmik.com/customer-support)



**WARNING:** This product contains a chemical known to the State of California to cause cancer. For more information, go to [www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov).