



**Instructions for 51-21004 - Polaris RZR Pro XP Soft Door Kit (PO-PRO-XP-SDK01)**

**Notice: Do not smoke inside the cab or expose the enclosure to direct flames. Product is FLAMMABLE.**

Be sure to read these instructions thoroughly before opening and installing the enclosure. The installation is best done when ambient temperature is 70°F or warmer. If installed in cold weather, warming the adhesive Velcro strips before installation is recommended.

1. Carefully open the carton and remove the rolled up Cab Enclosure on a large flat surface that is clean and free of dirt or other material that may soil or scratch the windows of the Cab.
2. Check over the parts included in the carton with the parts list shown below:

**Doors:**

<b><u>Velcro Hook QTY</u></b>	<b><u>Length</u></b>
2 each	24" long
2 each	10" long
4 each	6" long
2 each	4" long
22 each	3" long

**Door Insert**



<b><u>Velcro Hook QTY</u></b>	<b><u>Length</u></b>
2 each	20" long
2 each	16" long
2 each	10" long
2 each	5" long

**Door Sweep**

<b><u>Velcro Hook QTY</u></b>	<b><u>Length</u></b>
2 each	24" long
2 each	10" long

# 1. Door Panels


- a. Begin installation by hanging the Door Panels from the top by using the 3" adhesive Velcro strips as shown in the photos below:

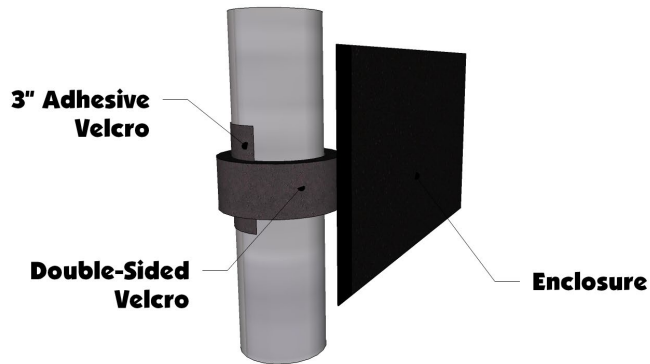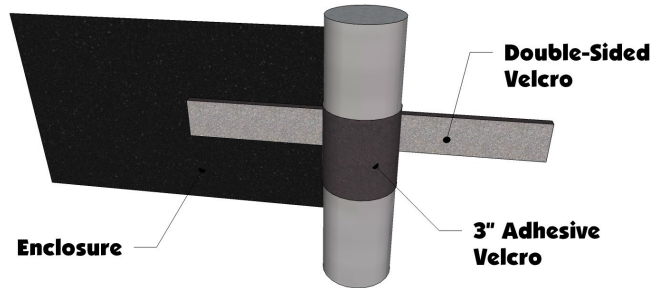

- b. After installing the double-sided strips attach the 4" tab in the top front corner using the 4" adhesive strips. See Photos Below:



- c. Now move to the bottom of the door. In the rear you will see a strap and buckle that will go down and wrap around a bar and back up to the buckle.
- d. The front of the door attaches to the inside of the stock door using the 10" and 24" adhesive strips as shown in the photos below:

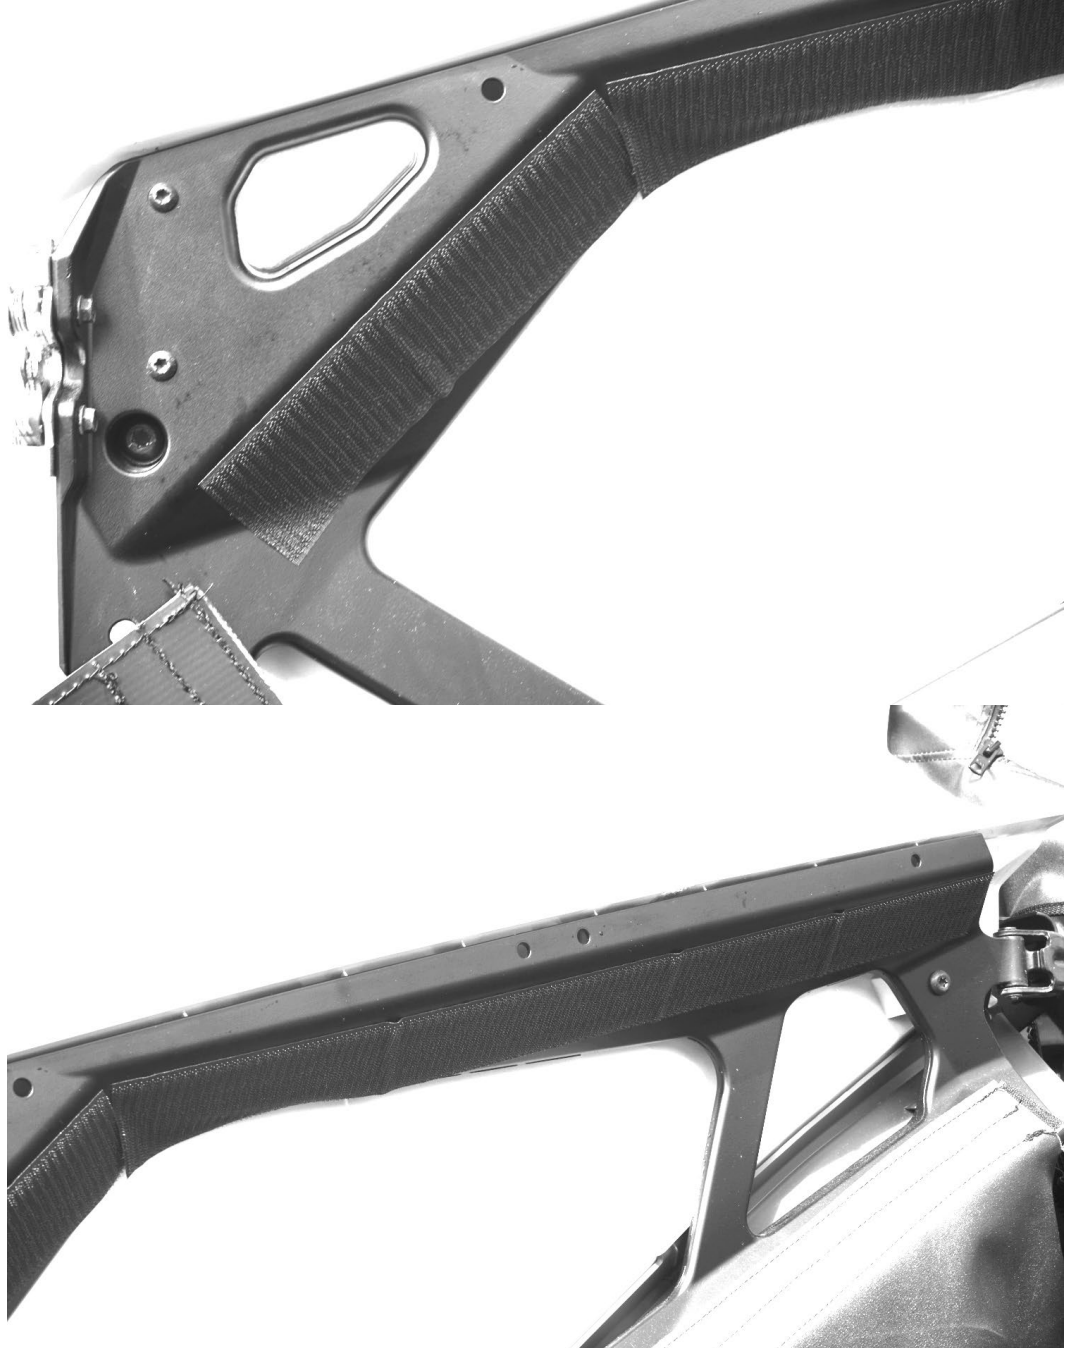


## **DOOR INSERT**

1. Start by taking the 16", 10" and 5" adhesive Velcro strips and place them around the opening in the door as shown in the photo below:



2. Then attach the door insert to the inside of the door as shown in the following photo.

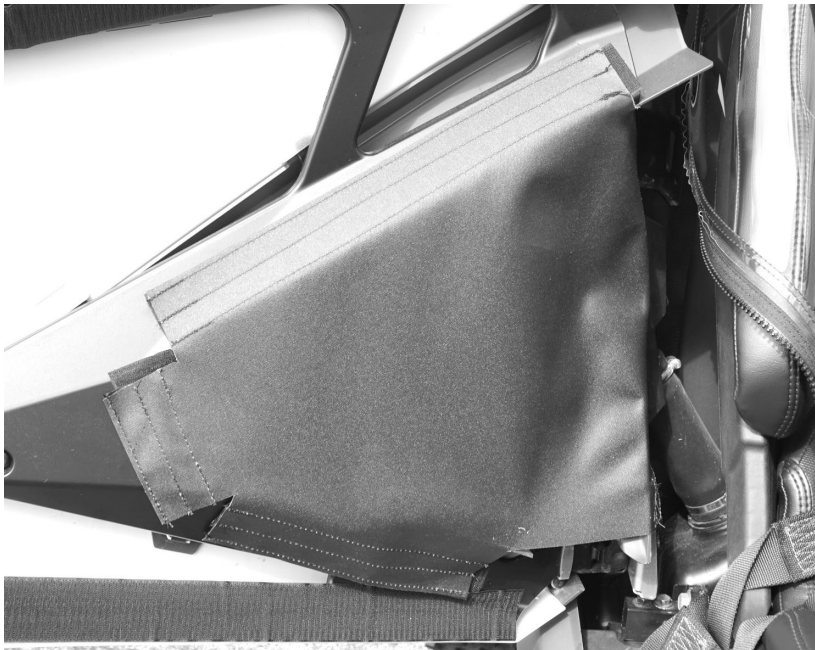

3. The next part is a little more difficult. Reach the back of the panel back between the seat and the back side panel while the door is wide open. You will notice where the is comes to. Take the 20" adhesive strip and place it there and attach the panel to it.

### Door Sweeps

4. The door sweep attaches to the bottom of the door to help seal off the door better. Take the 24" and 10" adhesive strips to the inside of the doors as shown in the picture below.



5. Finally place the door sweeps on the door as shown in the picture below.



## Cleaning and Storage Recommendations:

1. Before removing for storage, make sure it is very clean in order to prevent scratching of the window panels. Clean with a soft rag or sponge using a mild liquid detergent soap and warm water solution. Never rub the windows with a dry cloth or rag! Let the Cab dry thoroughly before attempting to roll for storage.
2. It is important that the Cab be rolled up for storage rather than folding. Folding will cause damage to the windows!!! Carefully roll up the Cab like the way it was when it was packed at the factory. On a large, clean, and flat surface, fold the doors over the rear panel first, then, interleave the top and windshield on top of the doors. Begin rolling the Cab into a roll approximately 8 inches in diameter. Put the rolled Cab back into the carton for storage at a normal room temperature. It is best not to expose the Cab to either extreme hot or cold temperatures when storing.

If you have any questions, comments, need assistance, or are missing parts, please contact us by one of the methods below.



**service@seizmik.com**



**1-866-838-3366**  
**between 9:00 AM and 5:00 PM EST.**



**[www.seizmik.com/customer-support](http://www.seizmik.com/customer-support)**



**WARNING:** This product contains a chemical known to the State of California to cause cancer. For more information, go to [www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov).