

**ROOF KIT FOR THE  
POLARIS RANGER 570 MIDSIZE 2 SEATER**

**81-20102**

**SEIZMIK<sup>®</sup>**

**HIGHLIFTER**

**SEIZMIK<sup>™</sup>**



 [service@seizmik.com](mailto:service@seizmik.com)

 1-866-838-3366  
between 9:00 AM and 5:00 PM EST.



[www.seizmik.com/customer-support](http://www.seizmik.com/customer-support)

Parts Available For These Popular Brands and Others

**POLARIS**

**can-am**



**HONDA**

**Kawasaki**

 **YAMAHA**

## BEFORE YOU BEGIN

READ THESE INSTRUCTIONS AND CHECK THAT ALL PARTS ARE ACCOUNTED FOR. PLEASE RETAIN THESE INSTRUCTIONS FOR FUTURE REFERENCE.

### PARTS


M6X16 BUTTON HEAD SOCKET CAP SCREW  
M6X25 BUTTON HEAD SOCKET CAP SCREW  
6MM ID X10MM TALL STANDOFFS  
HOOK AND LOOP STRAP 25MM WIDE, 300MM LONG  
6MM WASHERS  
M6 NYLON LOCK NUT  
M6X20 SELF TAPPING SCREW  
M10X30MM HEX FLANGE BOLTS  
10MM FENDER WASHERS  
ROOF REAR STRAP BRACKET  
3FT LENGTH, 10MM WIDTH WEATHER-STRIPPING

QTY 2  
QTY 2  
QTY 2  
QTY 1  
QTY 21  
QTY 2  
QTY 13  
QTY 4  
QTY 4  
QTY 1  
QTY 1




NOTE: INSTALLATION IS EASIER IF THE VEHICLE IS CLEAN AND FREE OF DEBRIS.  
ENSURE THE VEHICLE IS TURNED OFF AND IN PARK BEFORE INSTALLATION.

## STEP 1 ROOF ASSEMBLY

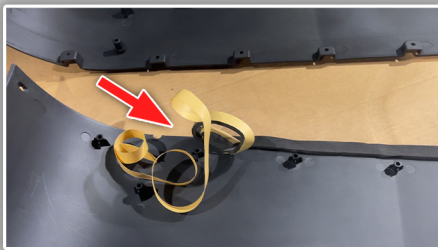

**RECOMMENDED:** YOU MAY ADD WEATHER STRIPPING OR SILICONE TO THE UNDERSIDE OF THE ROOF BEFORE ASSEMBLY.

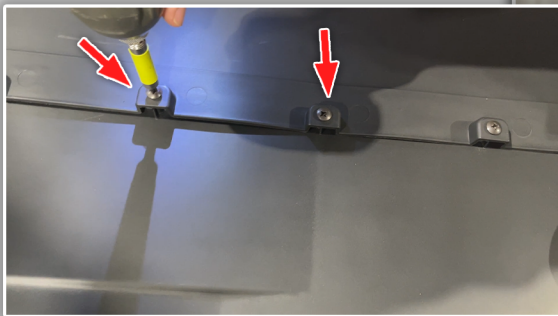

USE THE SELF TAPPING SCREWS PROVIDED IN YOUR KIT TO FIX THE FRONT AND REAR PIECES OF THE ROOF TOGETHER AS SHOWN IN THE IMAGE TO THE LEFT.

AT THE OUTER EDGES, SECURE USING THE M6X16 BUTTONHEAD SCREWS, 6MM WASHERS AND LOCK NUTS.


## STEP 2 ROOF INSTALLATION

SET THE ROOF IN PLACE ON THE FRAME AT THIS TIME.



REMOVE THE LOWER BOLT ON EITHER SIDE OF THE HEADER-PANEL AND REPLACE WITH INCLUDED M10X30MM HEX FLANGE BOLTS AND 10MM FENDER WASHERS. IN THE REAR, USE INCLUDED M10X30MM HEX FLANGE BOLTS AND 10MM FENDER WASHERS AND SECURE WITH M10 NYLON LOCK NUTS.






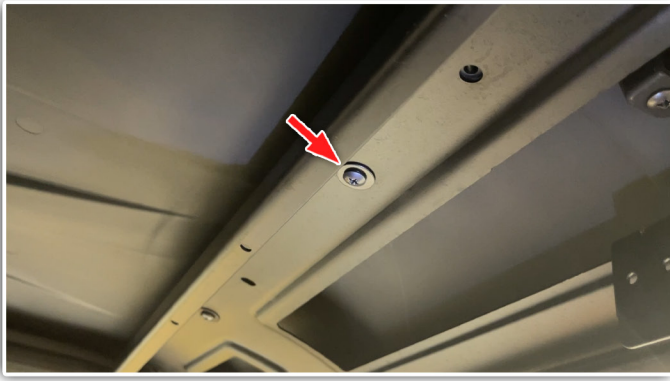

INSTALL THE M6X20MM SELF-TAPPING SCREWS AND 6MM WASHERS ON THE UNDERSIDE OF THE ROOF THROUGH THE FRAME ALONG THE FRONT OF THE VEHICLE.

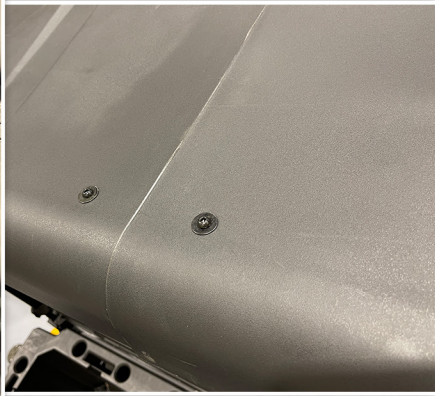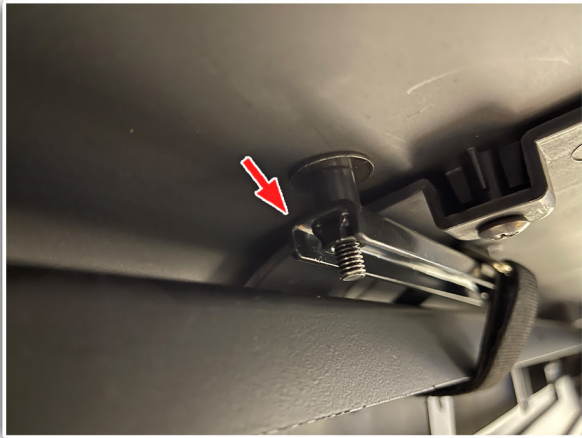

LOCATE THE HOLES ON THE UNDERSIDE OF THE ROOF NEAR THE REAR OF THE VEHICLE. INSTALL THE STRAP BRACKET USING THE STANDOFFS, M6X25 BUTTONHEAD SCREWS, AND 6MM WASHERS.

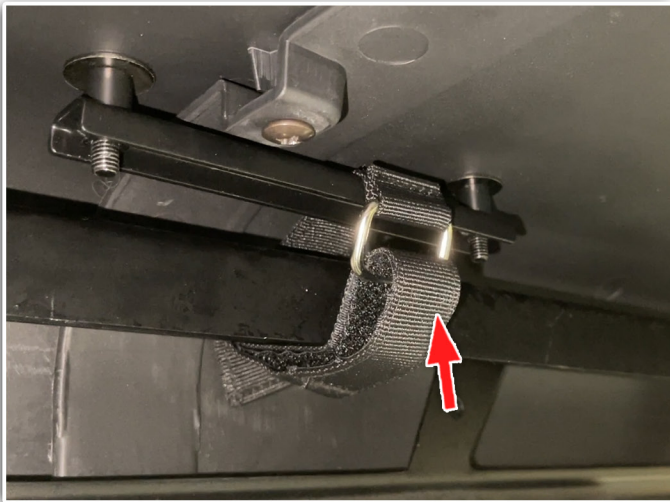

INSTALL THE STRAP RUNNING IT OVER THE BRACKET AND UNDER THE FRAME AS SHOWN.



THANK YOU FOR CHOOSING  
**SEIZMIK**

SEIZMIK