

ROOF KIT FOR CAN-AM DEFENDER

81-20103

SEIZMIK®

HIGHLIFTER

SEIZMIK™

FALCON RIDGE

SNORKEL YOUR ATV

SYSTEM 3
OFF-ROAD
Traction. Strength. Style.

EPI
PERFORMANCE

 service@seizmik.com

 1-866-838-3366
between 9:00 AM and 5:00 PM EST.



www.seizmik.com/customer-support

Parts Available For These Popular Brands and Others

POLARIS

can-am



HONDA

Kawasaki

YAMAHA

BEFORE YOU BEGIN

READ THESE INSTRUCTIONS AND CHECK THAT ALL PARTS ARE ACCOUNTED FOR. PLEASE RETAIN THESE INSTRUCTIONS FOR FUTURE REFERENCE.


PARTS

M6 THREADED CLIPS	QTY 3
M6X16 BUTTON HEAD SOCKET CAP SCREW	QTY 9
6MM WASHERS	QTY 20
M6 NYLON LOCK NUT	QTY 6
ROOF RETAINER PLATES	QTY 2
M8X20MM FLANGE HEX CAP BOLTS	QTY 4
BULB GASKET	QTY 1
10MM WIDTH WEATHER STRIPPING	QTY 2
M6X20 SELF TAPPING SCREW	QTY 13




NOTE: INSTALLATION IS EASIER IF THE VEHICLE IS CLEAN AND FREE OF DEBRIS. ENSURE THE VEHICLE IS TURNED OFF AND IN PARK BEFORE INSTALLATION.


STEP 1 ROOF ASSEMBLY

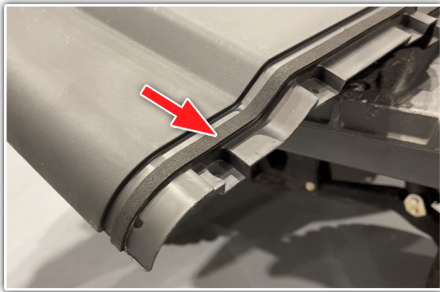

SUGGESTED (NOT INCLUDED): YOU MAY ADD WEATHER STRIPPING OR SILICONE TO THE UNDERSIDE OF THE ROOF BEFORE ASSEMBLY.

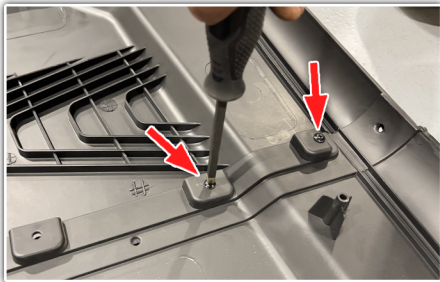

USE THE M6X20 SELF TAPPING SCREWS PROVIDED IN YOUR KIT TO FIX THE FRONT AND REAR PIECES OF THE ROOF TOGETHER AS SHOWN IN THE IMAGE TO THE LEFT.

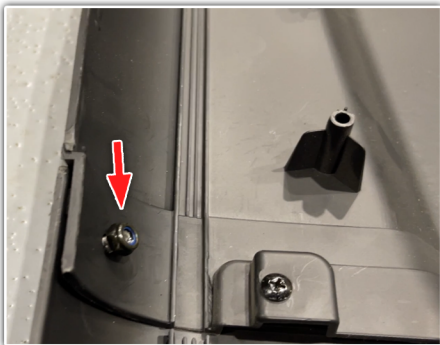


USE M6X16 CAP SCREWS, 6MM WASHERS AND LOCK NUTS IN THE REMAINING HOLES DOWN THE CENTER OF THE ROOF.



RUN THE PROVIDED WEATHER-STRIPPING ALONG THE UNDERSIDE CHANNELS AT EITHER SIDE OF THE ROOF.

RUN THE BULB GASKET ALONG THE UNDERSIDE CHANNEL AT THE FRONT.

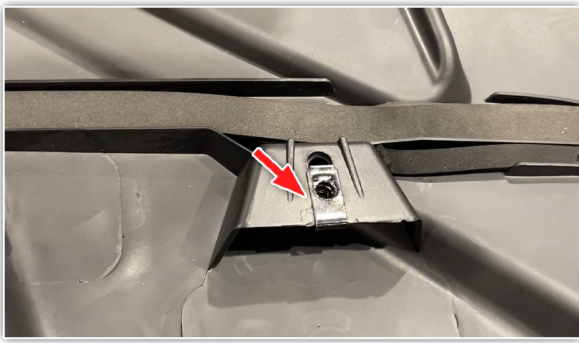

ATTACH THE THREE M6 THREADED CLIPS
ONTO THE FRONT OF ROOF AS SHOWN.

STEP 2 ROOF INSTALLATION

SET THE ROOF IN PLACE ON THE FRAME AT THIS TIME.

USING THE REMAINING M6X16 CAP SCREWS AND WASHERS TIGHTEN DOWN THE
FRONT OF THE ROOF AT THE POINTS WHERE YOU AFFIXED THE M6 THREADED CLIPS.



INSTALL THE RETAINER
PLATES AT REAR
CORNERS OF THE ROOF
WITH THE M8X20MM
FLANGE BOLTS .



THANK YOU FOR CHOOSING
SEIZMIK